



# MODEL GRUP

Madeni Yağ & Yedek Parça

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT01

PEUGEOT-CITROEN

OEM KODU (CODE): 5038.G6



301-C ELYSEE

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT02

PEUGEOT-CITROEN

OEM KODU (CODE): 5038.85



307 PARTNER TEPE-BERLINGO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT03

PEUGEOT-CITROEN

OEM KODU (CODE): 5038.F5



C2-C3-1007

AMORTİSÖR TAKOZ ÜST PULU

SHOCK ABSORBER  
WEDGE TOP RING

MDL-AT04

PEUGEOT-CITROEN

OEM KODU (CODE): 5033.75



301-307-C2-C3-PARTNER

AMORTİSÖR TAKOZ RULMANI  
SHOCK ABSORBER  
WEDGE ROLLER

MDL-AT05

PEUGEOT-CITROEN

OEM KODU (CODE): 5035.27  
5031.F1  
5035.63  
5035.19  
91510633



301-307-C2-C3-PARTNER

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT06

RENAULT

OEM KODU (CODE): 8200222463



MEGANE 2 - SCENIC 2

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT07

RENAULT

OEM KODU (CODE): 8200053795



CLIO / KANGO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT08

RENAULT - DACIA

OEM KODU (CODE): 6001547499  
8200275528



STEPWAY-SANDERO-LODGY



# MODEL GRUP

Madeni Yağ & Yedek Parça

AMORTİSÖR TAKOZU (Ön)  
SHOCK ABSORBER WEDGE (Front)

MDL-AT09

RENAULT

OEM KODU (CODE): 543200001R



MEGANE III SCENIC III FLUENCE

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT10

RENAULT

OEM KODU (CODE): 543206968R




MEGANE 4 - KADJAR

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT11

RENAULT

OEM KODU (CODE): 543024644R

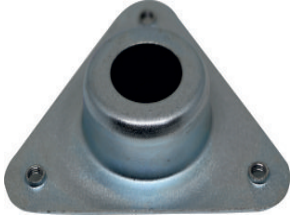

CLIO 4

AMORTİSÖR TAKOZ RULMANI  
SHOCK ABSORBER  
WEDGE ROLLER

MDL-AT12

RENAULT - DACIA

OEM KODU (CODE): 7700800107  
8200651172  
6001025850



CLIO KANGO - LOGAN-LODGY

AMORTİSÖR TAKOZU (RULMANLI)  
SHOCK ABSORBER WEDGE  
( WITH BEARING)

MDL-AT13

RENAULT

OEM KODU (CODE): 543207065R



MASTER 3

AMORTİSÖR TAKOZU (RULMANLI)  
SHOCK ABSORBER WEDGE  
( WITH BEARING)

MDL-AT14

FIAT

OEM KODU (CODE): 51804747  
51839975  
59360100




FIORINO-LINEA-DOBLO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT15

FIAT

OEM KODU (CODE): 51804747  
51839975  
59360100

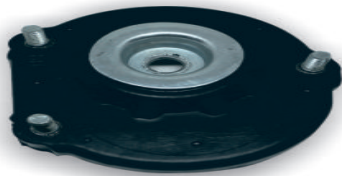

FIORINO-LINEA-DOBLO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT16

FIAT

OEM KODU (CODE): 50702841



STILO-BRAVO



AMORTİSÖR TAKOZ RULMANI  
SHOCK ABSORBER  
WEDGE ROLLER

MDL-AT17

FIAT

OEM KODU (CODE): 51804748  
51804747  
51839975  
344653



STİLO / FİORİNO / PUNTO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT18

FIAT

OEM KODU (CODE): 46746544



PANDA-PUNTO

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT19

VOLVO

OEM KODU (CODE): 30616824



S40

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT20

FORD

OEM KODU (CODE): CV613K155B2B



CMAX (DM2) / FOCUS II / FOCUS III / KUGA I / KUGA II

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT21

VOLVO

OEM KODU (CODE): 30683637



S60-S80

AMORTİSÖR TAKOZU  
SHOCK ABSORBER WEDGE

MDL-AT22

FORD

OEM KODU (CODE): 7T16 - 3K155



CONNECT